


PROSCAN

PORTABLE BLU-RAY DISC™ /DVD PLAYER

USER MANUAL

PDVD1187

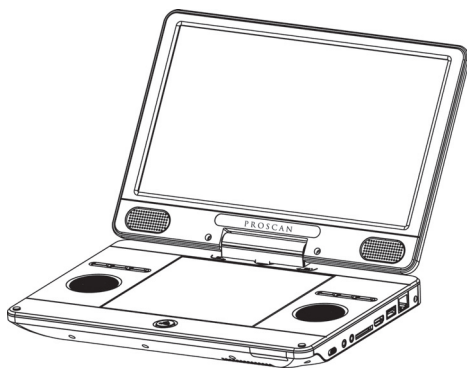

This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD.

PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at www.proscan-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

Table of Contents

Safety and Maintenance	2
Security Instructions	2
Remote Control	4
Quick Starting Guide	5
Connections	6
-Connect to the HDMI	6
-Connect Network	6
Play Video	6
Play a Blu-ray Video Disc.....	7
Play Music.....	9
Play a Photo slideshow	9
General Settings	11
-Basic Operation for the Menu	11
-General Player Settings	11
-Display Settings	12
Specifications	14
Troubleshooting	15
Warranty.....	17

Safety and Maintenance



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying product.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.

Security Instructions

Read all of the instruction before using this Blu-ray player and keep this manual in a safe place for future reference.

1. Read and keep these instructions.
2. Heed all warnings and follow all instructions.
3. Do not use this player near water.
4. Clean only with dry cloth.
5. Do not block any ventilation openings and install in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, or the player (including amplifiers) that produce heat.
7. Protect the power cord from being walked on or pinched particularly near the convenience receptacles, and the point where they exit from the player.
8. Use only with the cart, stand, tripod, bracket, table specified by the manufacturer or sold with the player. When a cart is used, use caution when moving the cart/player combination to avoid injury from tip-over.
9. Unplug this player during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel.

Servicing is required when the player has been damaged in any way, such as the power-supply cord or plug being damaged, liquid has been spilled or objects have fallen into the player, the player has been exposed to rain or moisture, does not operate normally, or has been dropped.

11. Please keep the unit in an environment with good ventilation.
12. **WARNING:** To reduce the risk of the fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the player.
13. **WARNING:** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
14. Do not expose the batteries to excessive heat such as fire direct sunshine or similar sources.



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



CLASS 1 LASER PRODUCT

Use of controls, adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.

Trademark Notice

DVD Logo is a trademark of DVD Format / Logo Licensing Corporation.

The Blu-ray Disc™, Blu-ray™, BD-Live™, BONUSVIEW™ word marks and logos are trademarks of the Blu-ray Disc Association.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Java and all other Java trademarks and logo are registered trademarks of Sun Microsystems, Inc.

SDHC Logo is a trademark of SD-3C LLC.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

If playback or copying is interrupted and one of the messages shown below is displayed, the content is an unauthorized copy protected by Cinavia technology.

<u>Message</u>	<u>Cinavia Message Code</u>
[Message(s) 1]	1
[Message(s) 2]	2
[Message(s) 3]	3
[Message(s) 4]	4

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

IPR Message

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All right reserved.

BD LIVE and BONUSVIEW are trademarks of the Blu-ray Disc Association.

SDHC Logo is a trademark of SD-3C LLC.




CAUTION: This product utilizes a laser.

Do not open cover and do not repair yourself. Refer servicing to qualified personnel.

Do not touch the lens by finger.

Remote Control

- (1) OSC: To access On Screen Control Menu.
- (2) MODE: Switch between DVD and AV IN
- (3) RESOLUTION: Press to change the resolution mode of the player.
- (4) REPEAT: The specific repeat mode is different according disc type.
DVD: RepeatCH>RepeatTT>RepeatAll>Repeat Off.
CD/VCD: Repeat track>Repeat all> Repeat Off.
Playlist: Repeat file>Repeat playlist>Repeat Off.
- (5) MEDIA CENTER: To turn on/off Media center.
- (6) VOL-: Decreases volume.
- (7) UP: Navigates through the Menus.
- (8) TOP MENU: To open the Top menu of BD/DVD video disc.
- (9) OK: Confirms an entry or selection.
- (10) LEFT: Navigates through the Menus.
- (11) SETUP: Access the SETUP menu.
- (12) NUMBERS: For direct channel access.
- (13) MARK VIEW: View bookmarks of the currently playing disc
- (14) PROG: Edit the program and play.
- (15) SUBTITLE: Select a subtitle language on a disc.
- (16) AUDIO: Select an audio language.
- (17) FAST FORWARD: Search forward.
- (18) FAST REVERSE: Search backward.
- (19) ANGLE: Playback a scene recorded with multiple

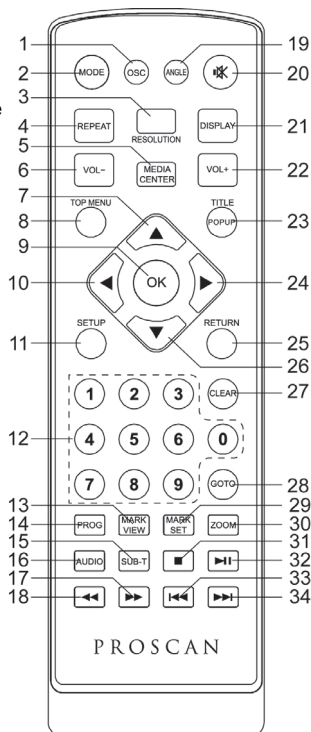


angles. (The angle function will not work on DVD video discs that does not contains recorded with multiple angles.)

- (20) MUTE: To mute the sound and press again to restore.
- (21) DISPLAY the current status or the disc information.
- (22) VOL+: Increases volume.
- (23) TITLE: To open the Title menu of a disc.
POPUP: Shows and hides popup menu.
- (24) RIGHT: Navigates through the Menus.
- (25) RETURN: Return to a previous display menu.
- (26) DOWN: Navigates through the Menus.
- (27) CLEAR: To clear an entry.
- (28) GOTO: Jump to a user specified time during playback.
- (29) MARK SET: Set bookmarks of the currently playing disc.
- (30) ZOOM: To zoom it or zoom out.
- (31) STOP: Stop play.
- (32) PLAY/PAUSE: Start (resume) / pause play.
- (33) PREV: Skip to the previous title, chapter or track.
- (34) NEXT: Skip to the next title, chapter or track.

Operating with the remote control

1. The remote control must point at the remote sensor, in order for the DVD player to function correctly.
2. The remote works best at a distance less than 5 meters and at an angle of up to $\pm 30^\circ$ toward the front of the unit.
3. Obstacles should not remain in between the remote control and the remote sensor on the main unit.

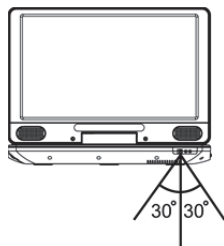

Quick Starting Guide

1. Connecting to an External Power Source

Connect the power adapter (supplied with the player) to the side input plug and to a wall outlet. Do not use any other device otherwise specified by your dealer.

2. Open the screen panel.


The screen panel of the portable DVD opens to a maximum 180° . And it can rotate 270° .

3. Press the open button on the left to open the disc cover.

4. Insert a DVD disc with label side facing upward.

Align the center of the DVD disc with the center of the disc guide. Press gently down on the DVD to snap the disc into place, and then close the disc cover.

5. Slide the power switch on the left side of the unit to power it on.



6. Press the OK button on the unit to start playback.

In most cases, when you leave by the PLAY/PAUSE button, continue to be used by

PLAY/PAUSE button.

The DVD player will immediately start rendering the DVD program.
When you want to stop, press the STOP button, it will return to the power-on logo.
The player can be recharged while playback.

Connections

1. Connect to the HDMI


Connect the HDMI cable (not supplied) to the HDMI jack on this product and to the HDMI input jack on the TV.

Tip

- You can optimize the video output by pressing the Resolution button repeatedly from the remote to select the best resolution the TV can support.
- To play the digital video images of a BD-video or DVD video via an HDMI connection, it is necessary that both this product and the display device (or an AV receiver/ amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system).
- This type of connection provides best picture quality.

2. Connect Network

Connect this product to the network to enjoy software updates and BD-Live bonus content.

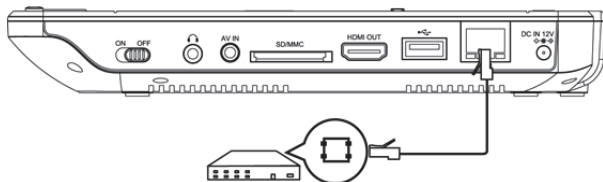

Connect the network cable (not supplied) to the LAN jack on this product and then connect the network cable to the LAN jack on the broadband modem or router.

Play Video

Control Video Play

1. Play a title
2. Use the remote to control the play back

Buttons	Action
▶	Start or resume play / Pause play.
■	Stop play.
◀◀ ▶▶	Skip to a previous/next title or chapter.
◀▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.

Note:

For BD disc with Java application, the resume function is not available.

Display Menu**BD-video Disc:**

TOP MENU: Stops the video playing and returns to the disc menu. This feature is disc-dependent.

POPUP: will access the BD-video disc menu without interrupting disc play.

DVD-video disc:

TOP MENU will display the root menu of a disc.

DISPLAY will display disc information and guide you through the available functions on the disc.

Change Video Play

Button	Action
Audio	Selects an audio language
SUBTITLE	Selects a subtitle language on a disc
REPEAT	Select or turn off repeat mode. Repeat options may vary from the disc type
DISPLAY	Display the current status or disc information
ZOOM	Zoom in/out of the video image
BOOK MARK SET	Set bookmarks of the currently playing disc
BOOK MARK VIEW	View bookmarks of the currently playing disc
PROGRAM	Edit the program and play
GOTO	Jump to a user specified time during playback
OSC	Access options relating to the current activity or selection, and control the video playback

Play a Blu-ray Video Disc

Blu-ray video discs have larger capacity and support features such as high-definition video, multichannel surround sound, Interactive menus and so on.

1. Insert a BD-video disc.
2. Playback will automatically start, or select a play option in the menu and press OK.
3. During playback, you can press TOP MENU to display additional information, features or content store on the disc.
4. During playback, you can press POPUP to display the disc menu without interrupting disc play.
5. During playback, press the [OSC] button on the RMC - the ON SCREEN MENU will be displayed.(As shown in the picture bellow)



PIP second video【BD-V】: Displays the state of the second Video. Use direction key【▶】 to open the second video selection box, then press【▲】/【▼】 to select the full screen video and the second video window (picture in picture).



(A) Primary video (B) Secondary video

second Audio【BD-V】: Displays the state of the second Audio. Use the direction key【▶】 to open the selection box, then press【▲】/【▼】 to switch on/off the audio output.

Enjoy BD-LIVE

You can enjoy the BD-Live functions which enable you to use Interactive functions on the disc when the unit is connected to the Internet.

Example of BD-Live Interactive functions:

1. Additional content (such as movie trailers, subtitles and BD-Java, etc.) can be downloaded to a connected USB storage device.
2. Special video data may be played while being downloaded.
3. When a disc supporting BD-Live is played, the product or the disc's ID can be sent to the content provider via the Internet. Service and functions will differ depending on the disc.

Note

- The unit must be connected and set up to access Internet.
- Depending on the connection environment, it may take time to connect to the Internet.
- When BD-Live functions are used and the unit is connected to the Internet, your standard Internet service provider charges will apply.
- Follow the instruction given by the disc when using the BD-Live function.
- It is recommended to use a USB storage device for download the content (at least 1GB free space is recommended).

Before you enjoy the BD-Live function, Please set up your Blu-ray as below step: Pressing the setup button to go into the system setup menu, then selecting BUDA and enter to BUDA setup to select the USB or Card when playing BD-Live disc.

Play Music

Controlling music playback

Use the remote control to control the playback for audio file.

Buttons	Action
	Start or Resume play / Pause Play
	Stop Play
	Skip to a previous or next title or chapter
	Search fast-backward or fast-forward. Press repeatedly to change the search speed.
	Select an item to play
REPEAT	Select or turn off repeat mode

Play a Photo Slideshow

You can play JPEG on the player as a slideshow.

1. Insert a disc or USB device that contains JPEG files

2. Select a Photo folder, then press OK to play.

-To select a Photo, use the Navigation buttons.

-To enlarge the selected Photo and start slideshow, press OK.

Note:

-It may require more time to display the disc content on your TV if there is a large number of songs/ photos compiled onto one disc.

-This product can only display digital camera Pictures in the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG, or Pictures in formats other than JPEG, or sound clips associated with Pictures.

-Folders/files that exceed the supported limit of this product cannot be displayed or played.

Controlling Photo slideshow

1. Begin a Photo slideshow.

2. Use the remote control to control the play as follows:

BUTTONS	ACTION
	Rotate a photo
	Flip a photo
	Stop play

Set slideshow interval and animation

1. During slideshow playback, press OSC. The options menu will be displayed.
2. Navigate the options with the Navigation button.
3. Select an option in the menu, then press OK.

Playing music during a Photo slideshow

Create a musical slideshow to play both CD music files and JPEG Photo files simultaneously.

Note:

Create a musical slideshow, you must store the CD and JPEG files on the same disc as the photos.

1. Select your CD music to play and start play-back.
 2. Press Media Center to return to the main menu.
 3. Navigate to enter a photo folder, then press OK to start slideshow play.
- Slideshow begins and continues till the end of the photo folder.
 - Audio continues to play until the end of the disc.
 - To stop the slideshow play, Press ■ .
 - To stop the music play, press ■ again.

General Settings

Basic Operation for the Menu

1. Press **■** twice during playback
2. Press **SETUP**, the **SETUP MENU** display on the screen.
3. Select a main menu by **◀/▶**.
4. Select the menu you want by **▲/▼** buttons and press **▶** to enter.
5. Select the option by **▲/▼** and press **▶**.
- You can press **◀** to return to the previous menu.
6. Select by **▲/▼** buttons and press **OK** to confirm.
- You can press **◀** to return to the previous menu.
7. To return to the main menu from any submenu, press **RETURN**.
8. To exit the menu, press **SETUP**.

Note:

These navigation buttons on the right side of the product do not apply to this model.

General Player Settings

System

1. Screen Saver: Turns the screen saver on/off. The screen saver will display in 3 mins if there is no operation when the unit is turned on.
2. Disc Auto Playback: Turns the disc auto playback function on/off.
3. Disc Auto Upgrade: Turns the Disc Auto Upgrade function on/off.
4. Load Default: Return the player to its default settings.
5. Upgrade: select this when you want to upgrade your player software to the latest version.
6. Easy setup: Make default settings Fast.
7. BUDA: Define memory for BD-J.

* Notice : BUDA Setup has two-submenu of "USB/SD" & "On board". If you choose "USB/SD", you must connect USB or Card first.

Language

1. OSD: Selects the OSD language.
2. Menu: Selects the menu language of the disc.
3. Audio: Selects the audio language for the program.
4. Subtitle: Selects the subtitle language for the program.

Note:

You have to select the audio and subtitle language according to the requirements on the disc.

Playback

1. Closed Caption: Turn on/off the CC function.
2. Angle Mark: Turn on/off the Angle mark function.
3. PIP Mark: Turn on/off the PIP mark function
4. Secondary Audio Mark: Turn on/off Secondary Audio mark function.

5. Last Memory: Turn on/off the last memory function
6. PBC: Turn the PBC function on/off.
7. Audio Watermark Level3

Security

1. Change Password: Changes the password for parental control menu.
2. Parental Control: to set the parental control.
3. Country Code: Select the Country code.

Note:

The original code is 0000. The code can be changed by user.

Network

- Connect this product to a broadband MODEM or router.
 - This player will start to detect if there is a connection to the network.
 - If the connection test fails, select (Retry) and press OK to try and re-connect to the network again.
1. Internet Connection: Displays the Internet connection state.
 2. Information: Displays information of the current Network.
 3. Connection Test: Tests the Internet connection state.
 4. IP Setting: Sets the IP for the player.
 5. BD-Live Connection: Connection situation of BD-Live.
 6. Proxy Setting: Setup Proxy Server.


Display Settings

TV

1. TV Screen: Selects the display mode for the TV.
2. Resolution: Selects the resolution for the TV.
3. TV System: Selects the TV system type.
4. Color Space: Selects the color space.
5. HDMI Deep Color: Selects the color for HDMI.
6. HDMI 1080P 24Hz: Enable/disable this settings.

Video Processing

1. Video Adjust: Enter the submenu to adjust the video display.
2. Sharpness: Select the playback sharpness mode.

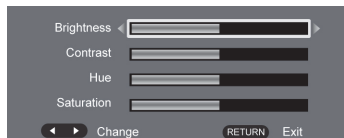

Adjust the Brightness, Contrast, Hue, Saturation of the screen to suit.

Audio Setting

1. HDMI: Selects the HDMI mode.
2. Down sampling: Selects down sampling.

(Select this when the Amplifier connected to the player is not 96KHz compatible)

3. DRC: Set DRC on / off or auto

Speaker Setting

1. configuration: channels 2x

2. Test Tone:

Clean Discs

Wipe the disc with a Micro fiber Cleaning Cloth from the centre to the edge in a straight line movement.

Note

To prevent possible damage of this product do not turn off the power or remove the USB flash drive while the software update is in progress.

Caution

Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs to clean the player.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

- "Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."
- "NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries

Specifications

Playback disc formats

BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW

Video formats

H.264/VC1/MPEG-1/MPEG-2/MPEG-4/WMV

Audio formats

Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, WMA

Photos

JPEG, PNG, GIF

Accessories supplied

- Remote control
- Composite Audio/Video cables 1.1m
- Power adapter
- Car power adapter
- Earphone
- User manual

Video

- Signal system: PAL / NTSC
- HDMI video output: Auto, 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p@24Hz

Audio

- HDMI output

USB

- As additional USB memory for software updates are storing BD-Live bonus contents.

LED indicator:

Power on: Blue

Charging: Red color during charging, the red LED will be off when fully charging.

Low Battery: Red color blinked.

Charging Time: Around 4 hours.

Playback Time: Around 3 hours.

Main unit

- Dimensions (w x h x d): 290 x 51 x 202 (mm)
- Net Weight: 1.28kg
- Wave length:
 - BD: 405 + 5nm/-5nm
 - DVD: 650 + 13NM/-10NM
 - CD: 790+15NM/-15NM

Troubleshooting

WARNING: Before requesting after service please check this possible resolution. Risk of electric shock. Never remove the casing of the product. To keep the warranty valid, never try to repair the product yourself.

No reaction to the remote control	• Make sure the player is connected to a power outlet. • Insert the batteries correctly. • Point the remote control at the IR sensor located on the front panel of this product. • If the remote still does not function, try putting new batteries into the remote control.
No picture/sound	• Make sure the connection is in good condition; volume is not too low; audio receiver or TV work normally; audio setting is proper.
No picture on HDMI connection	• If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed • Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable. • If this happens when you change the [resolution] setting, press Resolution on the remote control repeatedly until the picture appears.
High-definition video signal not playing on the TV	• Ensure that the audio cables are connected to the audio input of the TV • Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.
No sound on HDMI connection	• You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DIVI compatible.
Disc cannot be played	• Ensure that the disc is loaded properly • Ensure that this player supports the disc. See Specifications. • Ensure that this player supports the region code of the DVD or BD. • For DVD+RW, ensure that the disc is finalized. • Clean the disc.
Data Files cannot be played or read	• Ensure that the data file was recorded in the standard UDF, ISO9660 or JOLIET format. • Ensure that the JPEG file extension .jpg, JPG, jpeg or JPEG.

Not entry sign appears on the TV	• The requested operation is not possible.
BD-Live feature	• First, the disc must be marked with BD-LIVE, and ensure that the network is connected normally, insert USB disk or memory card, U disk or memory card to ensure at least 1GB above the space, the bigger the better. Then, make sure that the BUDA in system setting is set to "USB/SD".
Unable to access BD-Live feature	•Check the network internet connection or ensure that the network Internet connection has been set up •Clear USB storage. •Ensure that the BD disc supports BD Live Feature.

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

Name, address and telephone number.

Model number and serial number.

A clear, detailed description of the problem.


Proof of purchase including dealer or retailer name, address and date of purchase.

PROSCAN

Lecteur de CD et Dvd Blu - ray portable

NOTICE D'UTILISATION

PDVD1187

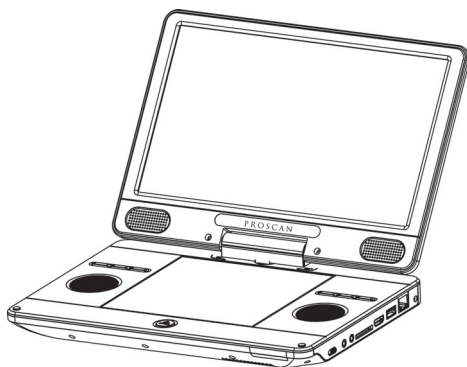

Ce produit a été fabriqué et vendu sous la responsabilité de CURTIS INTERNATIONAL LTD.

PROSCAN, et le logo PROSCAN sont des marques utilisées sous licence par CURTIS INTERNATIONAL LTD. – pour plus d'informations : www.proscan-brand.com.

Tous autres produits, services, dénominations sociales, marques, nom commerciaux, noms de produits et logos référencés ici sont la propriété de leurs titulaires respectifs.

Table des matières

Sécurité et entretien	2
Consignes de sécurité	2
Télécommande	5
Guide de démarrage rapide	6
Branchements	7
- Branchement HDMI	7
- Connexion réseau	7
Lecture vidéo	7
Lire un disque vidéo Blu-ray	8
Lire de la musique	10
Visionner un diaporama	10
Paramètres généraux.....	12
- Utilisation des menus	12
- Paramètres généraux du lecteur.....	12
- Paramètres d'affichage	13
Spécifications	15
Dépannage.....	16
Garantie	18

Sécurité et entretien



Ce symbole dudit produit intérieur risque de danger ou d'un choc électrique de tension ou de blesser les gens.



Ce symbole d'indication important accompagnant le produit.

AVERTISSEMENT : Pour réduire les risques d'incendie et de choc électrique, n'exposez pas cet appareil à la pluie ou à l'humidité. L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures, et aucun objet rempli de liquide, par exemple un vase, ne doit être placé sur l'appareil.

Consignes de sécurité

Lisez toutes les instructions avant d'utiliser ce lecteur Blu-ray et conservez cette notice d'utilisation dans un endroit sûr pour consultation ultérieure.

1. Lisez et conservez cette notice.
2. Respectez toutes les mises en garde et toutes les instructions.
3. N'utilisez pas ce lecteur près d'un endroit où il y a de l'eau.
4. Nettoyez l'appareil exclusivement avec un chiffon sec.
5. N'installez pas l'appareil près d'une source de chaleur, par exemple des radiateurs, des grilles de distribution de chauffage ou d'autres appareils (y compris les amplificateurs) produisant de la chaleur.
6. Disposez le cordon d'alimentation de manière à ce qu'il ne puisse être ni piétiné ni pincé, notamment au niveau de sa fiche, de la prise électrique et de l'endroit d'où il sort du lecteur.
7. Utilisez le lecteur exclusivement avec un chariot, un pupitre, un trépied, un support ou une table spécifié par le fabricant ou vendu avec le lecteur. Si un chariot est utilisé, faites attention quand vous déplacez l'ensemble chariot/lecteur pour éviter des blessures s'ils se renversent.
8. Débranchez ce lecteur quand il y a un orage et avant toute période d'inutilisation prolongée.
9. Faites appel à des réparateurs qualifiés pour toutes les réparations.
Faites systématiquement réviser le lecteur s'il a été endommagé de quelque manière que ce soit, par exemple si son cordon d'alimentation ou sa fiche est endommagé, si du liquide a été renversé sur le lecteur, si des objets sont tombés dans le lecteur, s'il a été exposé à de la pluie ou de l'humidité, s'il ne fonctionne pas normalement, ou s'il est tombé.
10. Veillez à ce que l'appareil reste dans un environnement bien aéré.
11. Prie l'unité maintenue dans un environnement ventilé.
12. Avertissement: pour réduire le risque d'incendie ou de choc électrique, de ne pas fixer ce dispositif est exposé à de l'eau de pluie ou à l'humidité. Ce dispositif ne doit pas être exposé à des gouttes d'eau ou d'éclaboussures, pas d'objet sera rempli de liquide, tel qu'un vase sur le corps de l'athlète.
13. Avertissement: si l'utilisation de la fiche d'alimentation électrique ou un coupleur électrique, comme un dispositif de déconnexion de dispositifs de déconnexion doit rester facile à utiliser.
14. Pas de la batterie est exposée à une surchauffe locale, tel qu'un feu, la lumière solaire directe ou similaire.



ATTENTION : Pour réduire le risque de choc électrique, ne démontez pas le boîtier (ou le capot arrière). Il ne contient aucune pièce réparable par l'utilisateur. Pour toutes les réparations, faites appel à un réparateur qualifié.



PRODUIT LASER DE CLASSE 1

L'utilisation de contrôles ou de dispositifs de réglages et l'exécution de procédures autres que ceux spécifiés dans les présentes peuvent provoquer l'exposition à un rayonnement dangereux.

Remarque concernant les marques commerciales

« DVD Video » est une marque commerciale de DVD Format / Logo Licensing Corporation.

« Blu-ray Disc » et le logo Blu-ray Disc sont des marques commerciales de la Blu-ray Disc Association. Fabriqué sous licence de Dolby Laboratories. « Dolby », « Dolby Audio », et le symbole du double D sont des marques commerciales de Dolby Laboratories Licensing Inc.

Pour les brevets DTS, consultez <http://patents.dts.com>. Fabriqué sous licence de DTS Licensing Limited. DTS, le Symbole, & DTS et le Symbole ensemble sont des marques déposées, et DTS 2.0+Digital Out est une marque commerciale de DTS, Inc. © DTS, Inc. Tous Droits Réservés.

Java et tous les autres logos et marques commerciales de Java sont des marques déposées de Sun Microsystems, Inc.

Remarque concernant Cinavia

Ce produit utilise la technologie Cinavia pour limiter l'utilisation de copies non autorisées de certains films et vidéos produits commercialement et de leur bande-son. Lorsqu'une utilisation interdite ou une copie non autorisée est détectée, un message s'affiche et la lecture ou la copie est interrompue.

Si la lecture ou la copie est interrompue et que l'un des messages suivants s'affiche, le contenu est une copie non autorisée protégée par la technologie Cinavia.

<u>Message</u>	<u>Code message Cinavia</u>
[Message(s) 1]	1
[Message(s) 2]	2
[Message(s) 3]	3
[Message(s) 4]	4

Des informations complémentaires sur la technologie Cinavia sont fournies par le Centre d'information client en ligne Cinavia à l'adresse <http://www.cinavia.com>. Pour demander via courrier des informations complémentaires sur Cinavia, envoyez une carte postale avec votre adresse postale à : Cinavia Consumer information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

Informations DPI

Copyright 2004-2013 Verance Corporation. Cinavia™ est une marque commerciale de Verance Corporation. Protégé par le brevet U.S. 7,369,677 et des brevets mondiaux délivrés et en instance sous licence de Verance Corporation. Tous droits réservés.

BD LIVE et BONUSVIEW sont des marques commerciales de la Blu-ray Disc Association.




ATTENTION : Ce produit utilise un laser.

N'ouvrez pas le capot de l'appareil et ne le réparez pas vous-même. Toute réparation doit être confiée à un personnel qualifié.


Télécommande

- (1) OSC: Accédez au menu de contrôle de l'écran.
- (2) MODE: Basculement entre DVD et AV IN
- (3) RESOLUTION: Activer/ désactiver la résolution
- (4) REPEAT: Différents types de rondelle Repeat sont différents
DVD: RepeatCH>RepeatTT>RepeatAll>Repeat Off.
CD/VCD: Repeat track>Repeat all> Repeat Off.
Playlist: Repeat file>Repeat playlist>Repeat Off.
- (5) MEDIA CENTER: Ouvrir le centre de fermeture Media Center
- (6) VOL-: Volume réduit
- (7) UP: Navigates through the Menus.
- (8) TOP MENU: To open the Top menu of BD/DVD video disc.
- (9) OK: Confirms an entry or selection.
- (10) LEFT: Navigates through the Menus.
- (11) SETUP: Accès au menu Paramètres
- (12) NUMBERS: For direct channel access.
- (13) MARK VIEW: View bookmarks of the currently playing disc
- (14) PROG: Edit the program and play.
- (15) SUBTITLE: Langues de sous-titrage
- (16) AUDIO: Choix d'une langue audio
- (17) FAST FORWARD: Allez-y.
- (18) FAST REVERSE: Retrouvez-vous..
- (19) ANGLE: Playback a scene recorded with multiple angles. (The angle function will not work on DVD video discs that does not contains recorded with multiple angles.)
- (20) MUTE: Mise en sourdine
- (21) DISPLAY Affiche les informations sur la rondelle courante
- (22) VOL+: Volume accru
- (23) TITLE: To open the Title menu of a disc.
POPUP: Shows and hides popup menu.
- (24) RIGHT: Navigates through the Menus.
- (25) RETURN: Return to a previous display menu.
- (26) DOWN: Navigates through the Menus.
- (27) CLEAR: To clear an entry.
- (28) GOTO: Jump to a user specified time during playback.
- (29) MARK SET: Set bookmarks of the currently playing disc.
- (30) ZOOM: To zoom in or zoom out.
- (31) STOP: Stop play.
- (32) PLAY/PAUSE: Start (resume) / pause play.
- (33) PREV: Skip to the previous title, chapter or track.
- (34) NEXT: Skip to the next title, chapter or track.

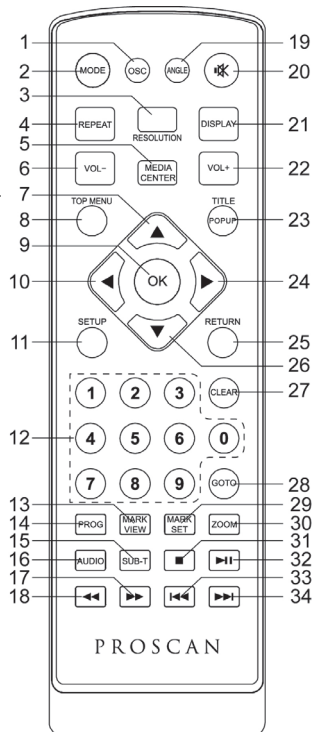

Utiliser la télécommande

1. La télécommande doit être dirigée vers le capteur du lecteur DVD pour qu'elle puisse fonctionner normalement.
2. La télécommande fonctionne mieux à une distance inférieure à 5 m et à un angle maximal de $\pm 30^\circ$ par rapport au panneau frontal de l'unité.
3. Il ne doit pas y avoir d'obstacle entre la télécommande et le capteur de l'unité principale.

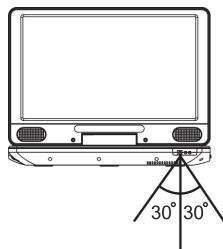

Guide de démarrage rapide

1. Branchement à une source d'alimentation externe

Branchez l'adaptateur secteur (fourni avec le lecteur) dans la prise d'alimentation latérale de l'appareil et dans une prise électrique murale. N'utilisez aucun autre dispositif non spécifié par le distributeur.

2. Ouvrez le panneau de l'écran.


Le panneau de l'écran du lecteur DVD portable peut être ouvert à angle maximal de 180° . Et il peut tourner à 270° .

3. Appuyez sur le bouton OPEN à gauche pour ouvrir le couvercle du plateau de lecture.

4. Insérez un DVD avec sa face imprimée en haut.

Alignez le centre du DVD avec le centre du guide de disque. Appuyez doucement sur le DVD pour l'encastrement, puis refermez le couvercle du plateau de lecture.

5. Faites glisser le bouton marche/arrêt vers la gauche de l'appareil pour l'allumer.



6. Appuyez sur le bouton OK de l'appareil démarrer la lecture.

Dans la plupart des cas, appuyez sur le bouton LECTURE/PAUSE pour mettre la lecture en pause et appuyez à nouveau sur ce bouton pour reprendre la lecture.

Le lecteur DVD démarre immédiatement la lecture du DVD.

Pour stopper la lecture, appuyez sur le bouton STOP, l'appareil retourne à l'affichage du logo de mise en marche. Le lecteur peut être rechargé pendant la lecture.

Branchements

1. Branchement HDMI


Branchez un câble HDMI (non fourni) dans la prise HDMI de cet appareil et dans la prise d'entrée HDMI d'un téléviseur.

Conseil

- Vous pouvez optimiser la sortie vidéo en appuyant plusieurs fois sur le bouton de résolution de la télécommande, afin de choisir la résolution optimale que le téléviseur peut prendre en charge.
- Pour pouvoir lire les images vidéo numériques d'une vidéo BD ou DVD via une connexion HDMI, il faut que cet appareil et l'appareil de visionnage externe (ou un récepteur/amplificateur AV) soient tous les deux compatibles avec le système de protection des droits d'auteur dénommé HDCP (high-bandwidth digital content protection system).
- Ce type de connexion fournit la meilleure qualité d'image.

2. Connexion réseau

Connectez cet appareil au réseau pour bénéficier des mises à jour logicielles et de contenus BD-Live supplémentaires.

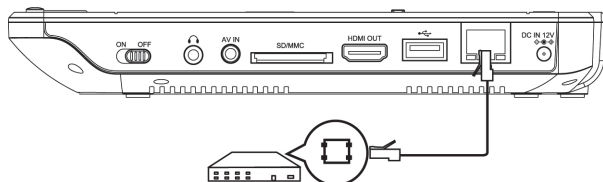

Branchez un câble réseau (non fourni) dans la prise LAN de cet appareil, puis branchez le câble réseau dans la prise LAN d'un routeur ou d'un modem large bande.

Lecteur vidéo

Contrôler la lecture vidéo

1. Démarrez la lecture d'une vidéo.
2. Utilisez la télécommande pour contrôler la lecture.

Boutons	Action
▶	Démarrer la lecture, la mettre en pause ou la reprendre.
■	Arrêter la lecture.
◀▶	Sauter au chapitre/titre précédent/suivant.
◀▶	Retour ou avance rapide. Appuyer plusieurs fois pour modifier la vitesse de défilement.

Remarque :

Pour les disques BD avec application Java, la fonction de reprise de la lecture n'est pas disponible.

Menu d'affichage des disques BD-véo :

TOP MENU : Arrêter la lecture vidéo et retourner au menu disque. Cette fonction est dépendante du disque.

POPUP : Accéder au menu disque BD-véo sans interrompre la lecture du disque.

Disque DVD-véo :

TOP MENU affiche le menu racine d'un disque.

DISPLAY affiche les informations disque et vous guide dans les fonctions disponibles sur le disque.

Modifier la lecture vidéo

Bouton	Action
Audio	Sélectionner la langue audio.
SUBTITLE (Sous-titres)	Sélectionner la langue des sous-titres sur un disque.
REPEAT (Répéter)	Sélectionner un mode de répétition ou désactiver la répétition. Les options de répétition peuvent différer selon le type de disque.
DISPLAY (Affichage)	Afficher le statut actuel ou les informations disque.
ZOOM	Effectuer un zoom avant ou arrière dans l'image vidéo.
BOOK MARK SET (Définir marque-page)	Définir des marque-pages sur le disque en cours de lecture.
BOOK MARK VIEW (Afficher marque-page)	Afficher les marque-pages du disque en cours de lecture.
PROGRAM (Programme)	Éditer le programme et le lire.
GOTO (Aller à)	Sauter à un temps spécifique pendant la lecture.
OSC	Afficher les options sur la sélection ou l'activité en cours et contrôler la lecture vidéo.

Lire un disque vidéo Blu-ray

Les disques vidéo Blu-ray ont une capacité plus grande et offrent plus de fonctionnalités, par exemple la vidéo haute définition, le son surround multicanal, les menus interactifs, etc.

1. Insérez un disque BD-véo.
2. La lecture commence automatiquement, sinon sélectionnez une option de lecture dans le menu et appuyez sur OK.
3. Pendant la lecture, vous pouvez appuyer sur TOP MENU pour afficher des informations additionnelles, des fonctions ou les contenus stockés sur le disque.
4. Pendant la lecture, vous pouvez appuyer sur POPUP pour afficher le menu du disque sans interrompre la lecture du disque.
5. Au cours de la lecture, appuyez sur le bouton Menu [OSC] dans l'écran de RMC OSC se ra affichée. (ondulée comme indiqué à la figure de tubes)



PIP **La seconde vidéo 【BD-V】** : l'état d'affichage de la seconde vidéo. à l'aide de la touche de direction **▶** ouvre la seconde boîte de sélection de vidéo, puis par **▲** / **▼** une vidéo plein écran et la seconde fenêtre vidéo (PIP).



(A) Vidéo primaire (B) Vidéo secondaire

Le second signal audio 【BD-V】 : l'état d'affichage de la seconde audio. L'utilisation de la touche de direction **▶** ouvre la boîte de sélection, puis par **▲** / **▼** de l'ouverture / fermeture de sortie audio.

Utiliser BD-LIVE

Vous pouvez profiter des fonctions BD-Live vous permettant d'utiliser les fonctions interactives du disque quand l'appareil est connecté à Internet.

Exemple de fonctions interactives BD-Live :

1. Des contenus supplémentaires (par exemple des bandes-annonces de film, des sous-titres, BD-Java, etc.) peuvent être téléchargés sur un support de stockage USB connecté.
2. Certaines données vidéo peuvent être lues pendant leur téléchargement.
3. Quand un disque compatible BD-Live est lu, l'identité de l'appareil ou du disque peut être envoyée au fournisseur de contenus via Internet. Les services et fonctions diffèrent selon le disque.

Remarque

- L'appareil doit être connecté et installé pour accéder à Internet.
- Selon l'environnement de connexion, il peut falloir un certain temps pour établir la connexion à Internet.
- Quand les fonctions BD-Live sont utilisées et que l'appareil est connecté à Internet, les frais standards de votre fournisseur Internet s'appliquent.
- Suivez les instructions fournies par le disque lors de l'utilisation des fonctions BD-Live.
- Il est recommandé d'utiliser un support de stockage USB pour télécharger les contenus (un espace de stockage libre d'au moins 1 Go est conseillé).

Profiter de la fonction BD-Live avant vous, s'il vous plaît, selon les étapes suivantes de lecteur Blu - Ray est votre: appuyer sur le bouton dans le système de menu de configuration, puis sélectionnez Buda et dans le Programme d'installation de Buda, sélectionner ou la carte de lecture de disque USB dans BD-Live.

Lire de la musique

Contrôler la lecture audio

Utilisez la télécommande pour contrôler la lecture de fichiers audio.

Boutons	Action
▶	Démarrer la lecture, la mettre en pause ou la reprendre.
■	Arrêter la lecture.
◀▶	Sauter au chapitre/titre précédent/suivant.
◀▶	Retour ou avance rapide. Appuyer plusieurs fois pour modifier la vitesse de défilement.
1 2 3 4 5 6 7 8 9 0	Sélectionner un élément à lire.
REPEAT (Répéter)	Sélectionner un mode de répétition ou désactiver la répétition.

Visionner un diaporama

Vous pouvez visionner les fichiers JPEG de votre lecteur sous forme de diaporama.

1. Insérez un disque ou un support de stockage USB comportant des fichiers JPEG.
 2. Sélectionnez un dossier photo, puis appuyez sur OK pour jouer.
- Pour sélectionner une photo, utilisez les boutons de navigations.
 - Pour agrandir la photo sélectionnée et démarrer un diaporama, appuyez sur OK.

Remarque :

- Il peut falloir plus de temps pour afficher le contenu du disque sur votre téléviseur s'il a un grand nombre de photos ou de fichiers audio sur le disque.
- Cet appareil ne peut afficher que les photos numériques au format JPEG-EXIF, généralement utilisées par la plupart des appareils photo numériques. Il ne peut pas afficher les fichiers Motion JPEG, les fichiers images d'un format autre que JPEG ou les

clips audio associés aux fichiers image.

- Les dossiers/fichiers dépassant la limite de cet appareil ne peuvent pas être affichés ou lus.

Contrôler les diaporamas

1. Démarrez un diaporama.
2. Utilisez la télécommande pour contrôler la lecture comme suit :

BOUTONS	ACTION
◀ ▶	Faire pivoter une photo
▲ ▼	Inverser une photo
■	Arrêter la lecture

Régler l'intervalle et l'animation du diaporama

1. Pendant le diaporama, appuyez sur OSC. Le menu des options s'affiche.
2. Naviguez dans les options avec les boutons de navigation.
3. Sélectionnez une option dans le menu, puis appuyez sur OK.
4. Appuyez sur OK.

Lire de la musique pendant un diaporama

Créez un diaporama musical pour lire simultanément les fichiers photo JPEG et audio CD.

Remarque :

Pour pouvoir créer un diaporama musical, vous devez stocker des fichiers audio CD et image JPEG sur le même disque.

1. Sélectionnez le fichier audio CD à lire et démarrez la lecture.
 2. Appuyez sur Media Center pour retourner au menu principal.
 3. Naviguez pour sélectionner un dossier de photos, puis appuyez sur OK pour démarrer le diaporama.
- Le diaporama commence et dure jusqu'à la fin du dossier de photos.
 - La lecture audio dure jusqu'à la fin du fichier CD.
 - Pour arrêter le diaporama, appuyez sur ■.
 - Pour arrêter la lecture audio, appuyez à nouveau sur ■.

Paramètres généraux

Utilisation des menus

1. Appuyez deux fois sur ■ pendant la lecture
 2. Appuyez sur SETUP, le menu des paramètres s'affiche.
 3. Sélectionnez un menu principal avec ◀/▶.
 4. Sélectionnez le menu désiré avec ▲/▼ et appuyez sur ▶ pour entrer.
 5. Sélectionnez une option avec ▲/▼ et appuyez sur ▶.
- Vous pouvez appuyer sur ◀ pour retourner au menu précédent.
6. Effectuez la sélection avec ▲/▼ et appuyez sur OK pour confirmer. Vous pouvez appuyer sur ◀ pour retourner au menu précédent.
 7. Pour retourner au menu principal depuis un sous-menu, appuyez sur RETURN.
 8. Pour quitter le menu, appuyez sur SETUP.

Note:

Des boutons de navigation produit de droite n'est pas applicable à ce modèle.

Paramètres généraux du lecteur

Système

1. Écran de veille : Activer ou désactiver l'écran de veille. L'écran de veille s'affiche pendant 3 minutes s'il n'y a pas d'opération quand l'appareil est allumé.
2. Lecture automatique de Disque : Activer ou désactiver la lecture automatiquement des disques.
3. Upgrading Automatique par Disque : Activer ou désactiver la mise à jour automatiquement des disques.
4. Insérer les paramètres par défaut : Restaurer les réglages par défaut du lecteur.
5. Mettre à niveau de Système : Sélectionnez cette option pour automatiser la mise à jour logicielle du lecteur sur la version la plus récente.
6. Configuration simple : Rendre les réglages par défaut rapides.
7. BUDA : Définir la mémoire pour BD-J.

* Remarque : La configuration BUDA comporte deux sous-menus : USB, Interne et Carte. Si vous choisissez « USB/SD », vous devez d'abord connecter une carte ou un support USB.

Langue

1. Display en écran: le menu de sélection de langue.
2. Menu: le choix de menu de disque.
3. Audio: audio, programme de sélection de la langue.
4. Sous-titres: langue de sous - titrage de sélection de programme.

Note:

Tu veux la sélection audio et sous - titres en fonction des exigences de la langue sur le disque optique.

Lecture

1. Sous-titres pour malentendants : Activer ou désactiver cette fonction.
2. Marque Angle : Activer ou désactiver la fonction indication de l'angle.
3. Marque PIP : Activer ou désactiver la fonction marque PIP.
4. Deuxième Marque Audio : Activer ou désactiver la fonction marque audio secondaire.
5. Dernière mémoire : Activer ou désactiver la fonction dernière mémoire.
6. PBC : Activer ou désactiver la fonction PBC.
7. Audio Watermark Level3

Sécurité

1. Modification Mot Passe : Modifier le mot de passe du menu contrôle parental.
2. Contrôle parental : Régler le contrôle parental.
3. Pays code : Sélectionner le code pays.

Remarque :

Le code par défaut est 0000. Le code peut être modifié par l'utilisateur.

Réseau

- Connecter cet appareil à un routeur ou un modem large bande.
 - Ce lecteur commence à détecter s'il y a une connexion au réseau.
 - Si le test de connexion au réseau est un échec, sélectionnez « Réessayer » et appuyez sur OK pour réessayer de vous connecter au réseau.
1. Internet Connection : Afficher l'état de la connexion Internet.
 2. Information : Afficher les informations sur le réseau actuel.
 3. Tester la connexion : Tester l'état de la connexion Internet.
 4. IP Setting : Régler l'adresse IP du lecteur.
 5. BD-Live Connection : État de la connexion BD-Live.
 6. Proxy Setting : Configurer un serveur proxy.


Paramètres d'affichage

La télévision

1. écran TV: le mode d'affichage de télévision sélectionné.
2. Résolution: la résolution de télévision sélectionné.
3. TV Système: choisir le type de système de télévision.
4. Couleur Espace: le choix de l'espace de couleur.
5. HDMI Couleur profonde: choix de couleurs HDMI.
6. HDMI 1080P 24Hz: Activer / désactiver ce réglage.

Traitement vidéo

1. Vidéo Ajustement : Afficher le sous-menu de réglage de l'affichage vidéo.
2. Netteté : Sélectionner le mode de netteté du lecteur.

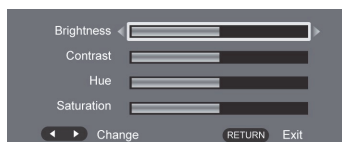

Régler la Luminosité, le Contraste, la Teinte et la Saturation de l'écran selon vos préférences.

Paramètres audio

1. HDMI Digital : Sélectionner le mode HDMI.
2. LPCM : Sélectionner le sous-échantillonnage.
(Sélectionnez cette fonction quand l'amplificateur connecté au lecteur n'est pas compatible 96 kHz.)
3. DRC : Compression de la gamme dynamique.

Paramètres de haut-parleur

1. Configuration : Canaux x 2
2. SON DE TEST

Nettoyer les disques

Essuyez les disques avec une lingette microfibre en procédant par lignes droites partant du centre vers le bord.

Remarque

Pour prévenir la détérioration potentielle de ce produit, ne coupez pas l'alimentation électrique et ne retirez pas une clé USB pendant les mises à jour logicielles.

Attention

N'utilisez jamais de solvants (par exemple du benzène), de diluants, de nettoyeurs vendus dans le commerce ou de sprays anti-statiques spécial disque pour nettoyer le lecteur.

Spécifications

Formats de disque compatibles

BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW

Formats Vidéo

H.264/VC1/MPEG-1/MPEG-2/MPEG-4/WMV

Formats audio

Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, WMA

Photos

JPEG, PNG, GIF

Accessoires fournis

- Télécommande
- Câble audio/vidéo 1.1m
- Adaptateur secteur
- Chargeur allume-cigare
- Écouteurs
- Notice d'utilisation

Vidéo

- Standard vidéo : PAL/NTSC
- Sortie vidéo HDMI : Auto, 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p à 24 Hz

Audio

- Sortie HDMI

USB

- Un support de stockage USB fournit une mémoire de stockage additionnelle pour les mises à jour logicielles et les contenus BD-Live.

Del Indicator:

Power on: bleu

Chargement: Lampe en clair, Le voyant rouge s'éteint lorsque la charge est terminée..

Faible niveau d'électricité: Le voyant rouge clignote.

Temps de charge: Environ 4 heures

Temps de lecture: Environ 3 heures

Unité principale

- Dimensions (L x H x P) : 290 x51x202 (mm)
- Poids net : 1,28 kg
- Longueur d'onde :
 - BD : 405 +5 Nm/-5 Nm
 - DVD : 650 +13 Nm/-10 Nm
 - CD : 790 +15 Nm/-15 Nm

Dépannage

AVERTISSEMENT : Avant de contacter le service après-vente, consultez ce chapitre pour essayer de régler le problème. Risque de choc électrique. Ne retirez jamais le boîtier du produit. Pour que la garantie reste valable, n'essayez jamais de réparer le produit vous-même.

La télécommande ne réagit pas.	• Vérifiez que le lecteur est branché dans une prise électrique. • Insérez les piles correctement. • Dirigez la télécommande vers le capteur IR présent sur le panneau avant de ce produit. • Si la télécommande ne fonctionne pas, essayez d'insérer des piles neuves dans la télécommande.
Il n'y a pas d'image/son.	• Vérifiez que les branchements sont corrects, que le volume n'est pas trop bas, que le récepteur audio ou le téléviseur fonctionne normalement et que les réglages audio sont corrects.
Il n'y a pas d'image avec la connexion HDMI.	• Si ce lecteur est connecté à un appareil d'affichage non autorisé via un câble HDMI, le signal audio/vidéo peut ne pas être affiché. • Vérifiez si le câble HDMI est défectueux. Si le câble HDMI est défectueux ou endommagé, remplacez-le. • Si cela se produit quand vous changez le paramètre [Résolution], appuyez plusieurs fois sur le bouton Résolution de la télécommande jusqu'à ce que l'image s'affiche.
Le signal vidéo haute définition ne s'affiche pas sur le téléviseur.	• Vérifiez que les câbles audio sont branchés dans les entrées audio du téléviseur. • Assignez l'entrée audio du téléviseur à l'entrée vidéo correspondante. Consultez la notice d'utilisation du téléviseur pour plus de détails.
Il n'y a pas de son avec la connexion HDMI.	• La sortie HDMI peut ne fournir aucun son si l'appareil connecté n'est pas compatible HDCP ou s'il est uniquement compatible DVI.
Impossible de lire le disque.	• Vérifiez que le disque est correctement inséré. • Vérifiez que ce lecteur est compatible avec le disque (voir les spécifications). • Vérifiez que ce lecteur est compatible avec le code régional du disque DVD ou BD. • Pour les DVD+RW, vérifiez que le disque est finalisé. • Nettoyez le disque.

Impossible de lire les fichiers de données.	• Vérifiez que le fichier de données a été enregistré dans le format UDF, ISO9660 ou JOLIET. • Vérifiez que l'extension du fichier JPEG est .jpg, JPG, jpeg ou JPEG.
Aucun signal d'entrée ne s'affiche sur le téléviseur.	• L'opération demandée est impossible.
BD-Live fonctionnel	• Tout d'abord, le disque optique doit être pourvu de BD-Live identifie et réseau pour assurer une connexion normale, l'insertion de la carte U disque ou de stockage de cartes ou de stockage, U disque, afin de garantir que l'espace au - dessus d'au moins 1 GB, plus grand, c'est mieux. Ensuite, De veiller à ce que les Buda disposé dans le système est réglé sur "USB/SD".
Impossible d'accéder à la fonction BD-Live.	• Contrôlez la connexion Internet et vérifiez qu'elle a été configurée. • Effacez le stockage USB. • Vérifiez que le disque BD supporte la fonction BD-Live.

For service assistance and product information, please call: 1-800-968-9853.

Pour obtenir assistance et information appelez: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

Pour faire une demande de garantie, veuillez envoyer un courriel électronique à support2@curtiscs.com ou appeler le 1-800-968-9853.

90 jours de garantie

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jugé défectueux, à notre choix; Cependant, vous êtes responsable de tous les coûts associés au retour du produit. Si le produit ou le composant n'est plus disponible, nous le remplacerons par un produit similaire de valeur égale ou supérieure. Avant l'envoi d'un produit de remplacement, le produit doit être rendu inutilisable ou nous être renvoyé.

Cette garantie **ne couvre pas** le verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).

Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat. **Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite.** Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisant pas les limitations de garanties implicites ou de dommages spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner.

Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

JOIGNEZ VOTRE PREUVE D'ACHAT ICI, UNE PREUVE D'ACHAT EST NÉCESSAIRE POUR

OBTENIR UN SERVICE DE GARANTIE.

Veuillez avoir l'information suivantes lorsque vous contactez l'équipe d'assistance :

- Nom, adresse et numéro de téléphone.
- Numéro de modèle et numéro de série.

- Une description claire et détaillée du problème.
- Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.

